


Sunshade

Dug In Sunshade : Component list

- 6 posts
- 1 centre boss
- 6 wall plates
- 6 long rafters
- 6 short rafters
- 6 fascia boards
- 30 x 8' 5" Feather edge Boards
- 60 x 6' 5" Feather edge Boards

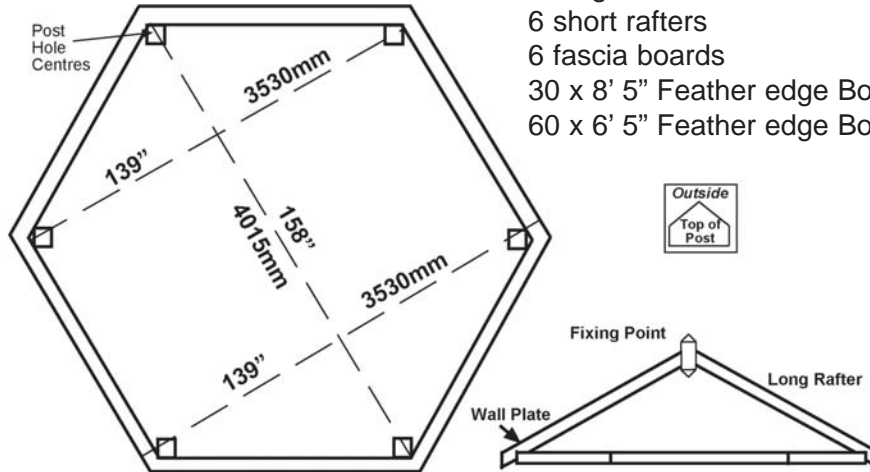

Post & Wall plate

Set out wall plates in the required position in to a true hexagon.

Mark each inside point as centre of holes to be dug of the posts, holes to be ten inches square and twenty four deep.

Stand posts in each hole, with all recesses on the outside fix wall plate around the top of the post. Brace wall plates in to horizontal and true hexagon, level and brace vertical each post one at a time.

When all posts are vertical and parallel to each other back fill with spoil and post mix. Ram firm.

Roof

Hold boss centre of hexagon as diagram, fix all long rafters to long points at wall plate.

Line up tops of rafters five inches down on boss and fix, repeat with short rafters fixing bottoms to wall plate, centre between long rafters.

Cut roof cladding to fit roof, should overlap by one inch.

Sunshade with Floor

(additional components)

- 6 x 4" Beams
- 5 x 4" Beams
- 2 x 4" angled Beams
- 2 x 4" angled Beams (short)
- 30 x Deck Boards

Floor

Place six beams out as true hexagon fix. Place one post with four-inch notch in position at bottom (mark), fit long beam out side of mark space evenly and fix. Then fix angled beams.

Fit all post (4" timber locks) then clad floor with deck boards.